

Product Features

- 1.Suitable for various of metal coins;
- 2.Two working modes: coin mode or display mode;
- 3.CPU process control, score accurately;
- 4.Special precise/normal stall, coin smoother;
- 5.Powerful prevent phishing and other means of cheating, with cheating alarm;
- 6.Excellent technology in circuit part,stable and reliable quality;
- 7.Double color light show receive coin, intuitively distinguish true or false coin;
- 8.Open cover design, completely solve the coins jamming and blocking.

Steps for usage

- 1.Take out the plastic coin from the slot, put your coin in;
- 2.According to machine's motherboard,select the output mode NC(normally close)/NO(normally open).Usually use NC stall
- 3.According to machine's motherboard,select the output pulse switch (25ms/50ms/100ms,usually use 25ms) ; ;
- 4.According to your coin,select the sensitivity.If you require a high accuracy,adjust it to "precision".If some true coins were misjudged as false coins, adjust it to "normal";
- 5.Install coin acceptor,it can be used after connecting power and signal wires.



**Step①:** Pull up, remove the red example coin, then put your reference coin.

**Adjust the sensitivity** slightly, the factory has adjusted to a reasonable position.

**A** Mounting holes: With a square neck screw diameter of 4mm

**H** Coin slot: Please use the coins  $\phi 20\text{mm} \sim \phi 29\text{mm}$ , the thickness of the coins is 1.2mm~2.4mm.

**J** Coin mouth: False coin/foreign body from here to exit.


**I** Coin Return Button: When a larger coin or foreign object gets stuck, pressing this button will eject the object.

**D** Code table(gray)  
Power 12V(red)  
Signal output(white)  
Power Ground(black)  
Code table(gray)


**Step②:** Set SW1 output mode, select NC/NO, the factory setting is NC.

**Step③:** Set SW2, select the output pulse switch (25 ms/ 50ms/100 ms), the factory setting is 25ms.

**Step④:** Set SW3, sensitivity switch, select precise/ normal, the factory setting is Normal.

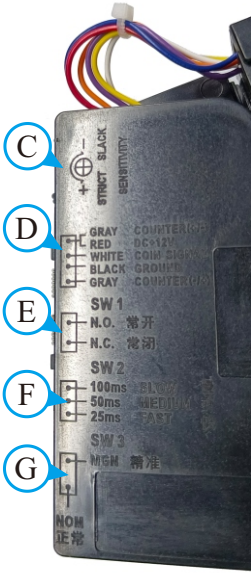

Pattern Customization Area Instructions


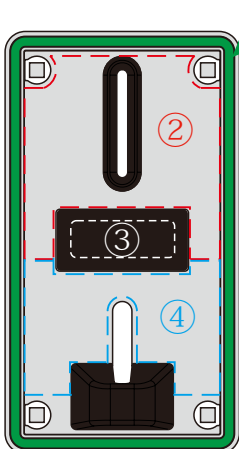


- ①: Green area – Outer ring, color can be set independently.
- ②: Red dashed area – Upper panel, pattern and color can be customized.
- ③: White dashed area – Button section, pattern and color can be customized.
- ④: Blue dashed area – Lower panel, pattern and color can be customized.


Communication circuit

Coin detected "real coin", when the circuit gives a pulse signal (the pulse signal can be selected by the switch SW1, normally closed or normally open output; SW2 switch to select pulse width, see Figure 1)


The circuit output of this product is a triode collector or MOS tube drain open output, When it is used, users are advised to use optocouplers to receive signals when designing the interface circuit (see Figure 2).

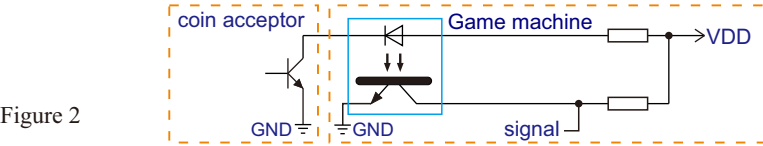

The size diagram and effect diagram Unit:mm

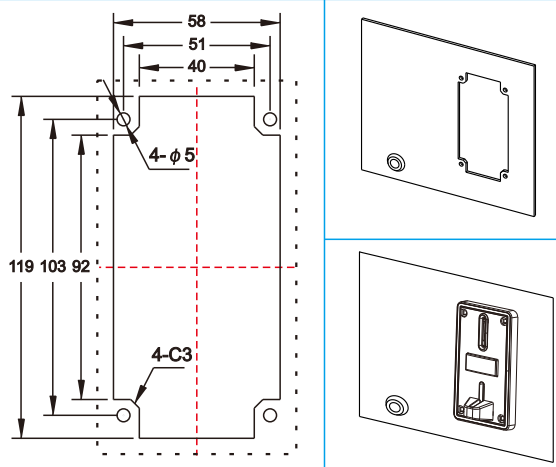

Note: Band ( ) is the relative size of the coin slot

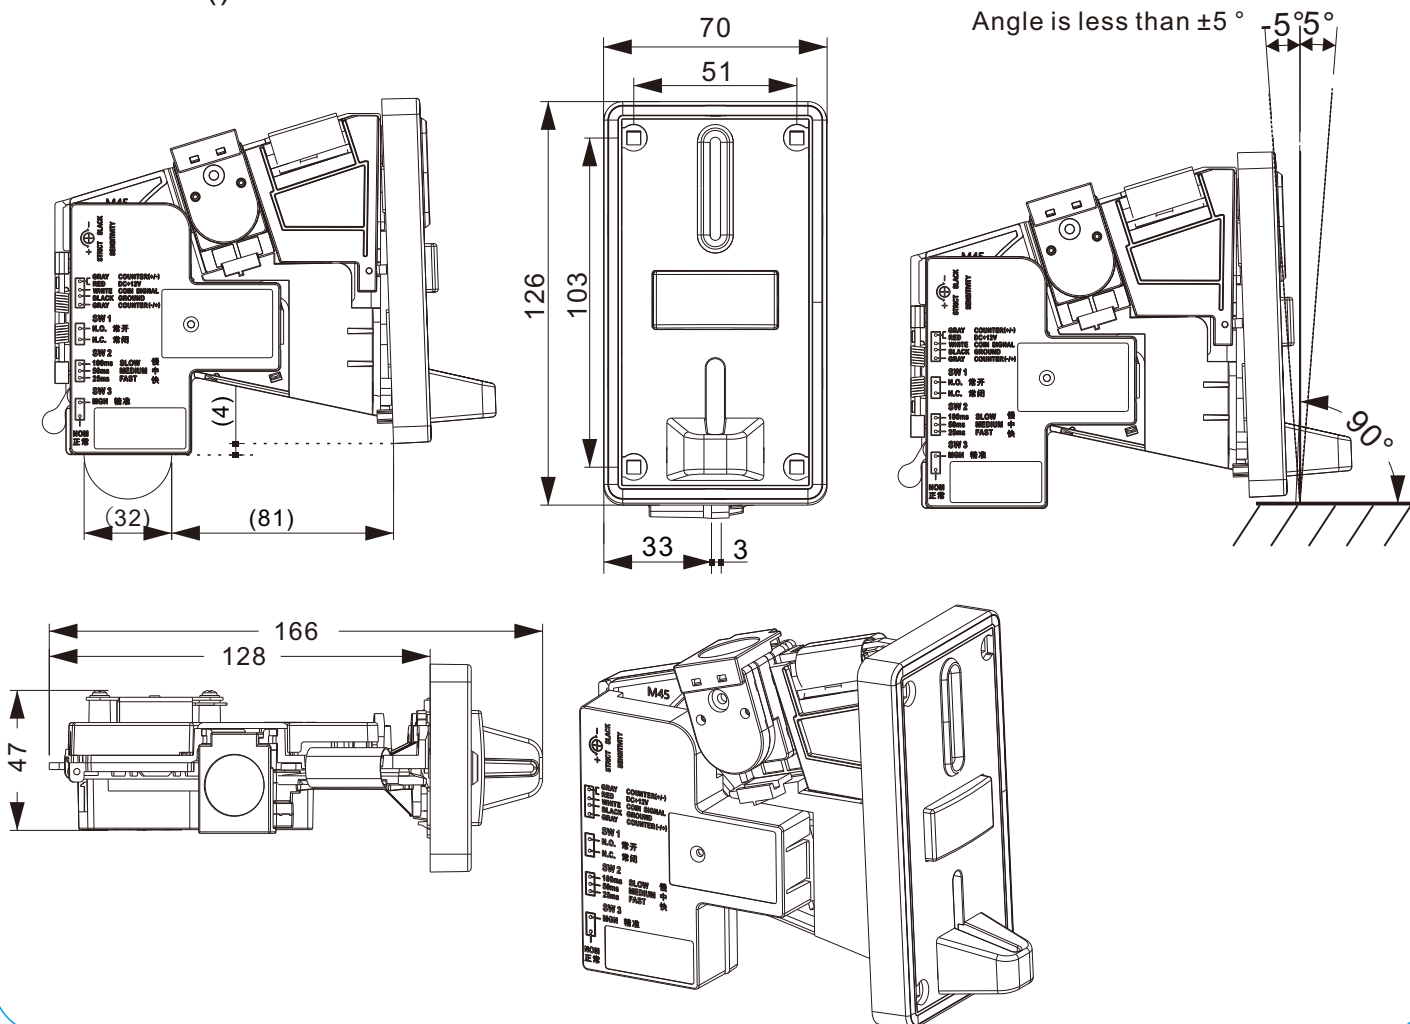

### Common abnormalities handling

#### A. Coin not passed

- 1.If there is poor contact in the coin power outlet;
- 2.If the wiring is correct;
- 3.If there is a foreign body in the coin track;
- 4.If power supply 12V is normal;
- 5.If the out mouth of coin is smooth;
- 6.If prototype is fit correctly;
- 7.If mounting depth is enough;
- 8.If there is a foreign body in the coin track, such as electric eye position is blocked.

#### B. Coin not score

- 1.If SW1 NO/NC is set matched;
- 2.If SW2 plus width is matched;
- 3.If the signal is connected well,if connection method is correct;
- 4.Coin signal and open collector output,if the target board is connected with pull-up resistor.

#### C. Coin not smooth

- 1.Adjust precise switch, precision stall:more stringent selection, commonly normal stall;
- 2.If prototype is fit correctly;
- 3.If coin slot is smooth,such as hopper tank depositing port and slot machine outlet slot are aligned;
- 4.Adjust VR knob,clockwise screening more relaxed, counterclockwise more strict.

#### D. Accept false coin

- 1.Adjust precise switch to precision stall;
- 2.Counterclockwise adjust VR knob(counterclockwise more strict)

#### E. Code mode doesn't move

- 1.If the wiring is correct(An end of the code table is connected with code table line , the other end of DC+12V);
- 2.If the code mode is bad;
- 3.Cable resistance is too large, resulting in power is below standard;
- 4.The power supply voltage and rated voltage code table required are the consistent.

### Basic parameters

Operating voltage		DC12V±10%	
Standby currenxy		< 500mA	
Operating currenxy (Maximum current)		< 1300mA	
Operating temperature		-15℃~65℃	
Output mode		OC.	
Output signal		25ms/50ms/100ms	
Coin diameter		20~29mm	
Coin thickness		1.2~2.4mm	
Angle assembly		-5°~5°	
Individual packaging	Meas		171*75*133mm
	Gross weight	Without wire	365g
		With wire	380g
Carton packaging	Package		30PCS/SET
	Meas		53.5*39.5*28.3cm
	Gross weight	Without wire	11.75KG
		With wire	12.20KG

### Assemble requirements

To prevent interference from adjacent signals, the adjacent mounting distance should be greater than 15mm.

